



REF. NO.	PART NAME
1	PVS VALVE
2	TEMPERATURE CONTROLLED VACUUM VALVE
3	EGR VALVE
5	NORMALLY OPEN SOLENOID VALVE
6	SPARK DELAY VALVE
7	CHECK VALVE
8	DISTRIBUTOR VACUUM ADVANCE
9	AMBIENT TEMPERATURE SWITCH (LOCATED IN RIGHT FRONT DOOR PILLAR)
12	LOOP (LOCATED ON DASH IN ENG. COMPT.)
13	DUAL AREA DIAPHRAGM (LOCATED ON RR. OF TRANS.)

3-14D (FORD & MERCURY)