



| REF. NO. | PART NAME |
|----------|--|
| 1 | PVS VALVE |
| 2 | TEMPERATURE CONTROLLED VACUUM VALVE |
| 3 | EGR VALVE |
| 5 | NORMALLY OPEN SOLENOID VALVE |
| 6 | SPARK DELAY VALVE |
| 7 | CHECK VALVE |
| 8 | DISTRIBUTOR VACUUM ADVANCE |
| 9 | AMBIENT TEMPERATURE SWITCH (LOCATED IN RIGHT FRONT DOOR PILLAR) |
| 12 | LOOP (LOCATED ON DASH IN ENG. COMPT.) |
| 13 | DUAL AREA DIAPHRAGM (LOCATED ON RR. OF TRANS.) |

3-14D (FORD & MERCURY)