



REF. NO.	PART NAME
1	PVS VALVE
2	TEMPERATURE CONTROLLED VACUUM VALVE
3	EGR VALVE
4	NORMALLY OPEN SOLENOID VALVE
6	SPARK DELAY VALVE
8	DISTRIBUTOR VACUUM ADVANCE
10	SPEED SENSOR (LOCATED IN SPEEDOMETER CABLE)
11	ELECTRONIC AMPLIFIER (LOCATED UNDER DASH)
12	LOOP (LOCATED ON DASH IN ENG. COMPT.)
13	DUAL AREA DIAPHRAGM (LOCATED ON RR. OF TRANS.)