



REF. NO.	PART NAME
1	PVS VALVE
2	TEMPERATURE CONTROLLED VACUUM VALVE
3	EGR VALVE
4	NORMALLY OPEN SOLENOID VALVE
5	NORMALLY OPEN SOLENOID VALVE
6	SPARK DELAY VALVE
7	CHECK VALVE
8	DISTRIBUTOR VACUUM ADVANCE
9	AMBIENT TEMPERATURE SWITCH (LOCATED IN RIGHT FRONT DOOR PILLAR)
10	SPEED SENSOR (LOCATED IN SPEEDOMETER CABLE)
11	ELECTRONIC AMPLIFIER (LOCATED UNDER DASH)
12	LOOP (LOCATED ON DASH IN ENG. COMPT.)
13	DUAL AREA DIAPHRAGM (LOCATED ON RR. OF TRANS.)