



REF. NO.	PART NAME
2	TEMPERATURE CONTROLLED VACUUM VALVE
3	EGR VALVE
6	SPARK DELAY VALVE
8	DISTRIBUTOR VACUUM ADVANCE
9	AMBIENT TEMPERATURE SWITCH (LOCATED IN RIGHT FRONT DOOR PILLAR)
12	LOOP (LOCATED ON DASH IN ENG. COMPT.)
13	DUAL AREA DIAPHRAGM (LOCATED ON RR. OF TRANS.)
14	IN-LINE BLEED HOSE TO CARB. AIR HORN
15	3-WAY SOLENOID VALVE
16	EGR DELAY VALVE